




Cornhole Wrap Installations

Make sure your Cornhole Board is painted with a clear coat or a gloss surface or painted with an oil based paint. If your boards are painted with latex paint eggshell preferably gloss, mix up a mixture of 70% alcohol and 30% water in a spray bottle and clean the surface thoroughly 2 times with clean towels ea. time. Make sure it is clean and dirt free before applying the wrap. Our wraps are designed to be installed dry. Use firm pressure using your squeegee to put it down.


We use air release 3M wrap to help the novice installer.

Place your wrap shown taped in place

Tape down one side

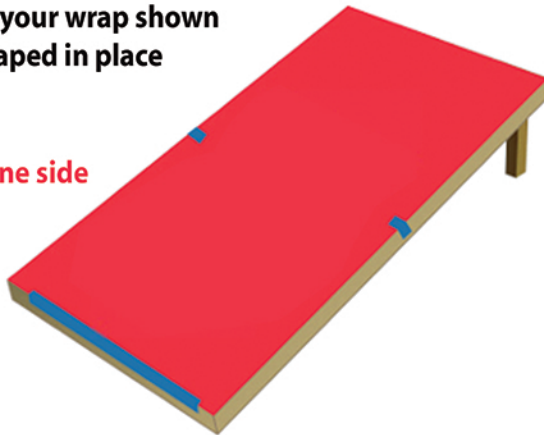


Fold top half of wrap back over bottom half

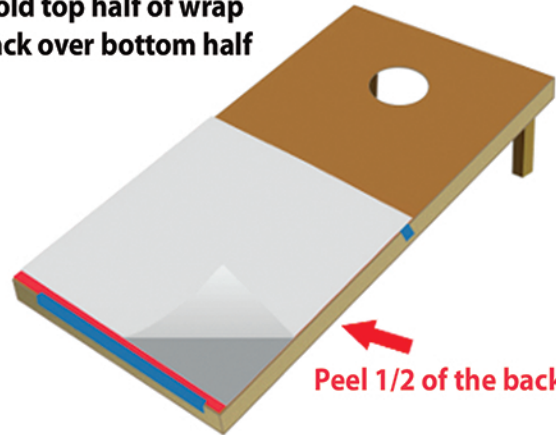


Peel 1/2 of the backing

Once backing paper is completely laid back, trim backing with scissors near edge and remove backing as shown.

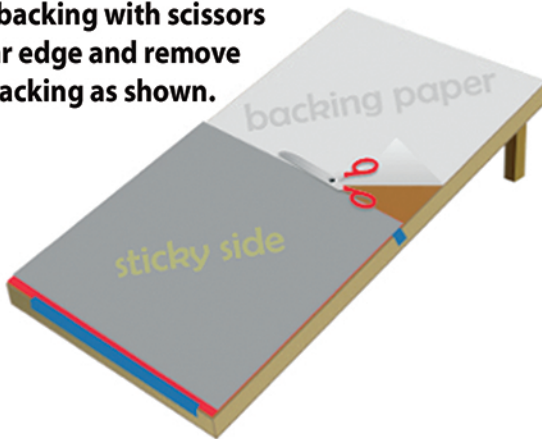

Using squeegee in a side to side and forward motion pressing down firmly removing air.

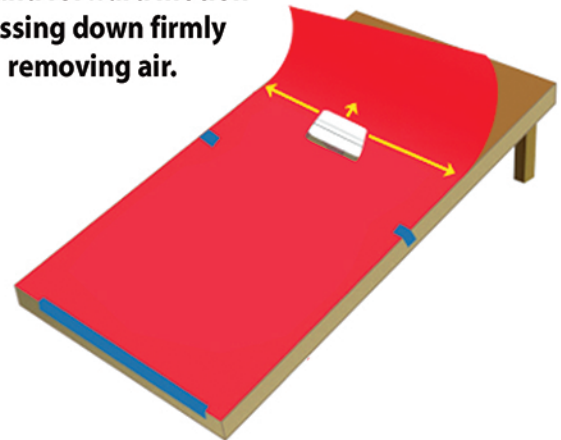

Remove tape and repeat these steps for the other half of decal. Using a utility knife or Xacto Blade Carefully trim the edges and the hole area.

If you have any questions when installing call 586-239-8389 and we can walk you thru the process.

